














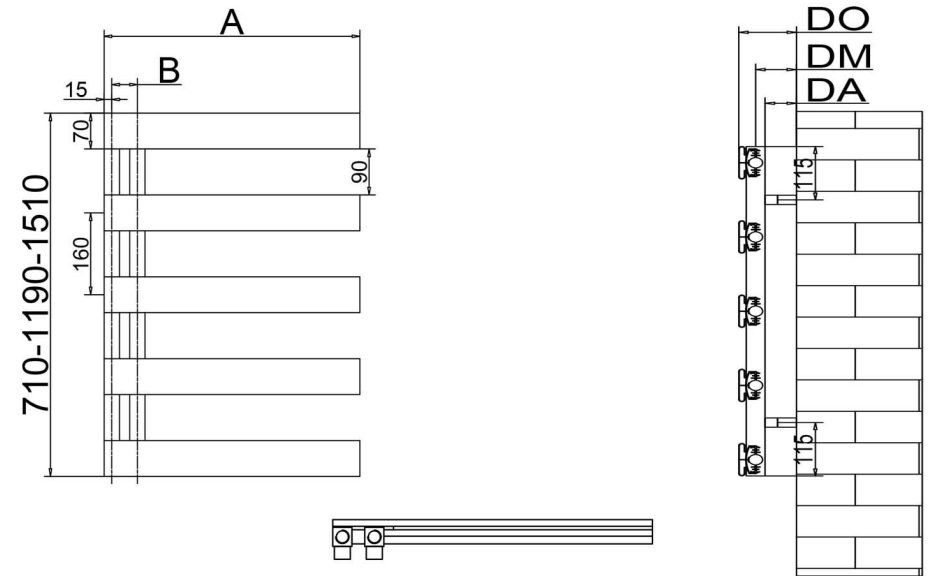 


# CARPENA INSTALLATION GUIDE



*This product must be fitted only by a fully qualified installer.*

| Description  | Illustration  | Qty |
|--------------|---|-----|
| Radiator     |  | 1   |
| Bracket      |  | 4   |
| Fixing Screw |  | 4   |
| Air Vent     |  | 2   |
| Vent cover   |  | 2   |

| Description   | Illustration   |
|---|--|
| Fixings choose the appropriate fixing for the wall material if required |  |
| PTFE tape   |   |
| Electric drill  |   |
| Masonry drill bit appropriate to the fixings                            |   |
| Adjustable spanner  |   |
| Radiator valve Hex Key  |   |
| Flat head and Philips head screw drivers                                |   |
| 1 Lock shield valve and 1 Gate or Thermostatic valve                    |   |
| Spirit level  |   |
| Measuring tape  |   |



*This picture represents appearance look of a radiator.*

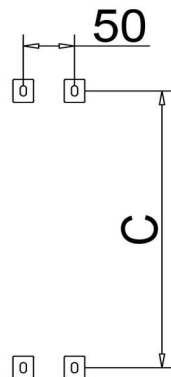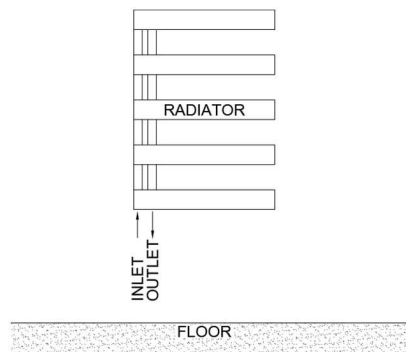  

| NAMES       |      | A   | B  | C    | TUBE QTY | DA | DM | DO |
|-------------|------|-----|----|------|----------|----|----|----|
| A-CPN0715SA | 710  | 500 | 50 | 480  | 5        | 50 | 65 | 92 |
| A-CPN0715SK | 710  | 500 | 50 | 480  | 5        | 50 | 65 | 92 |
| A-CPN0715SW | 710  | 500 | 50 | 480  | 5        | 50 | 65 | 92 |
| A-CPN1195SA | 1190 | 500 | 50 | 960  | 8        | 50 | 65 | 92 |
| A-CPN1195SK | 1190 | 500 | 50 | 960  | 8        | 50 | 65 | 92 |
| A-CPN1195SW | 1190 | 500 | 50 | 960  | 8        | 50 | 65 | 92 |
| A-CPN1515SA | 1510 | 500 | 50 | 1280 | 10       | 50 | 65 | 92 |
| A-CPN1515SK | 1510 | 500 | 50 | 1280 | 10       | 50 | 65 | 92 |
| A-CPN1515SW | 1510 | 500 | 50 | 1280 | 10       | 50 | 65 | 92 |

## GENERAL RECOMMENDATION

- Before fitting the radiator it is necessary to wash out the heating system to remove any existing mud, scale, work residues, traces of flux, oil, etc.
- When the system water pH is outside the 8,5-5,5 range and/or when the dissolved is above 0,1mg/liter, it is always needed to protect the heating system components (the radiator is one of these) with a proper chemical treatment compatible with all parts in contact with water (silicon rubber too).
- In order to fit the radiator to the wall, it is necessary to choose the proper fixings for the wall material.
- If the system water exceeds °50C, please install a warning mark near the radiator to avoid any accidental scalding.
- Clean the radiator surface only with a soft cloth to avoid scratching the finish and do not use chemical agents during cleaning operations. It is prohibited to climb on the radiator.
- Maximum working temperature °95C, maximum working pressure 4 bar.