


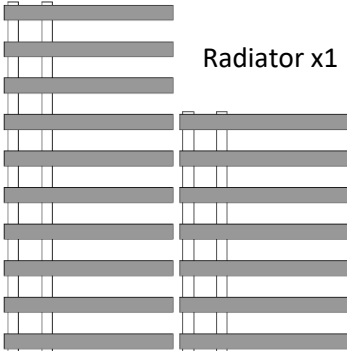














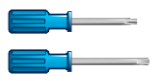


GRACE

INSTALLATION GUIDE

This product must be fitted only by a fully qualified installer.

DESCRIPTION	DESCRIPTION	ILLUSTRATION
 <p>Radiator x1</p> <p>1150 790</p>	<p>Fixing choose the appropriate fixing for the wall material if required</p>	
	PTFE tape	
	Electric drill	
	Masonry drill bit appropriate to the fixings	
	Adjustable spanner	
	Radiator valve hex key	
	Flat head and philips head screw drivers	
	1 lock shield valve and 1 gate or thermostatic valve	
	Spirit level	
	Measuring tape	
 <p>Brackets x4</p>		
 <p>Wall Anchors x4</p>	 <p>Washers x4</p>	
 <p>Fixing Screws x4</p>	 <p>Air vent x1</p>	
 <p>Security Screws x4</p>	 <p>End plug x1</p>	

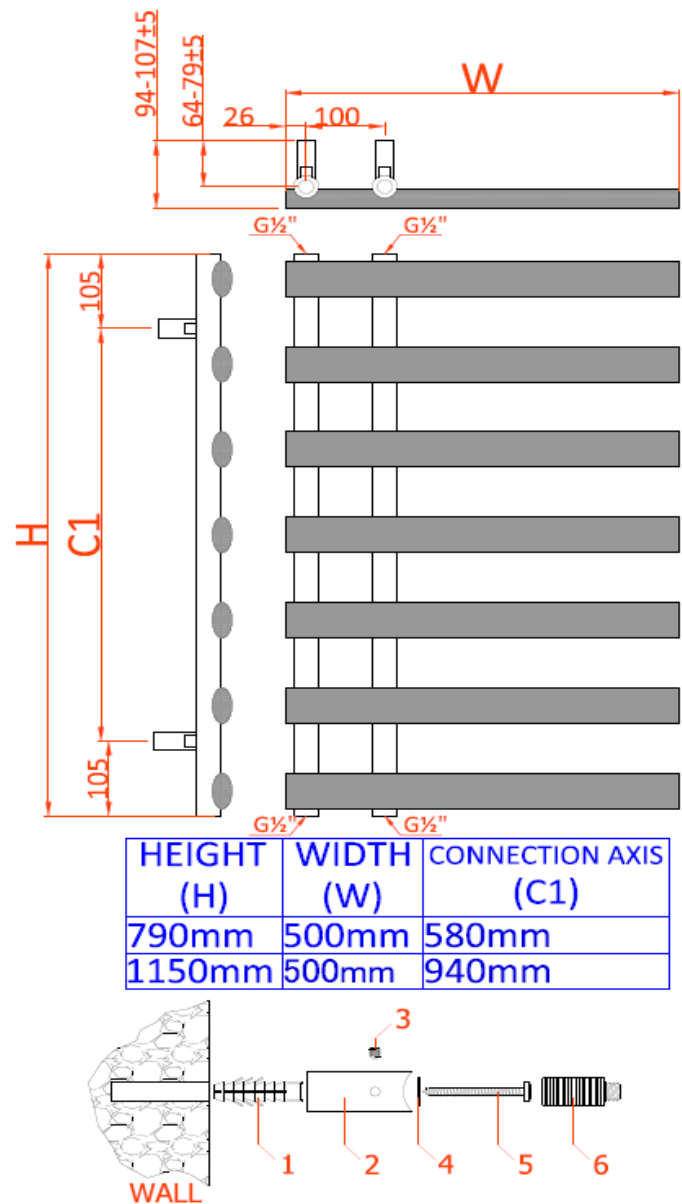

- The radiator should not be mounted closer than 50mm below any overhanging surface (i.e. shelf) and no lower than 100mm from the floor.
- Transfer the bracket drill position measurements to the
- Drill the wall and insert wall anchors (1) (or other suitable fixings).
- Put the brackets (2) on the wall and screw them to the wall anchors (1) with fixing screws (5) and washers (4).
- Screw the brackets (6) onto the nuts welded on the back of the radiator.
- Insert brackets (6) into the brackets (2) and tighten the security screws (3).

GENERAL RECOMMENDATION

- Before fitting the radiator it is necessary to wash out the heating system to remove any existing mud, scale, work residues, traces of flux, oil, etc.
- When the system water pH is outside the 5,5-8,5 range and/or when the dissolved is above 0,1mg/litre, it is always needed to protect the heating system components (the radiator is one of these) with a proper chemical treatment compatible with all parts in contact with water (silicon rubber too).
- In order to fit the radiator to the wall, it is necessary to choose the proper fixings for the wall material.
- If the system water exceeds 50°C, please install a warning mark near the radiator to avoid any accidental scalding.
- Clean the radiator surface only with a soft cloth to avoid scratching the finish and do not use chemical agents during cleaning operations. It is prohibited to climb on the radiator.
- Maximum working temperature 95°C, maximum working pressure 4 bar.