
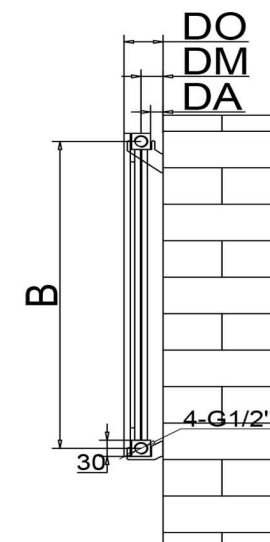


# PIATTO INSTALLATION GUIDE



This product must be fitted only by a fully qualified installer.

| Description    | Illustration                                                                      | Qty |
|----------------|-----------------------------------------------------------------------------------|-----|
| Radiator       |  | 1   |
| Top Bracket    |  | 2   |
| Bottom Bracket |  | 2   |
| Fixing Screw   |  | 4   |
| Spacer         |  | 4   |
| Air Vent       |  | 2   |
| Vent cover     |  | 2   |

| Description                                                             | Illustration                                                                      |
|-------------------------------------------------------------------------|-----------------------------------------------------------------------------------|
| Fixings choose the appropriate fixing for the wall material if required |  |
| PTFE tape                                                               |  |
| Electric drill                                                          |  |
| Masonry drill bit appropriate to the fixings                            |  |
| Adjustable spanner                                                      |  |
| Radiator valve Hex Key                                                  |  |
| Flat head and Philips head screw drivers                                |  |
| 1 Lock shield valve and 1 Gate or Thermostatic valve                    |  |
| Spirit level                                                            |  |
| Measuring tape                                                          |  |

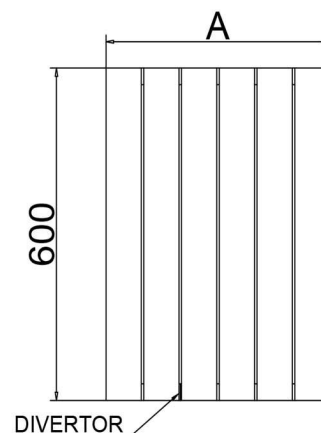

*This picture represents appearance look of a radiator.*

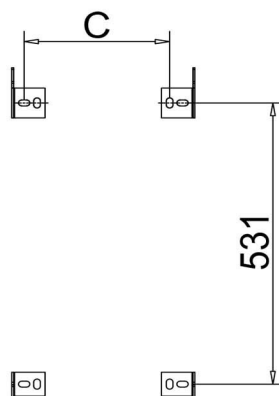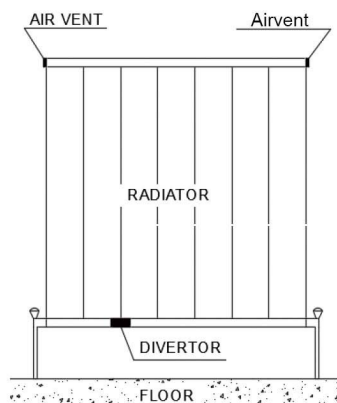

| NAMES         |     | A    | B   | C     | TUBE QTY | DA | DM | DO |
|---------------|-----|------|-----|-------|----------|----|----|----|
| A-PTO060044SA | 600 | 445  | 570 | 262.5 | 6        | 20 | 35 | 62 |
| A-PTO060044SW | 600 | 445  | 570 | 262.5 | 6        | 20 | 35 | 62 |
| A-PTO060059SA | 600 | 595  | 570 | 412.5 | 8        | 20 | 35 | 62 |
| A-PTO060059SW | 600 | 595  | 570 | 412.5 | 8        | 20 | 35 | 62 |
| A-PTO060082SA | 600 | 820  | 570 | 637.5 | 11       | 20 | 35 | 62 |
| A-PTO060082SW | 600 | 820  | 570 | 637.5 | 11       | 20 | 35 | 62 |
| A-PTO060104SA | 600 | 1045 | 570 | 862.5 | 14       | 20 | 35 | 62 |
| A-PTO060104SW | 600 | 1045 | 570 | 862.5 | 14       | 20 | 35 | 62 |
| A-PTO060119SA | 600 | 1195 | 570 | 862.5 | 16       | 20 | 35 | 62 |
| A-PTO060119SW | 600 | 1195 | 570 | 862.5 | 16       | 20 | 35 | 62 |
| A-PTO060142SA | 600 | 1420 | 570 | 862.5 | 19       | 20 | 35 | 62 |
| A-PTO060142SW | 600 | 1420 | 570 | 862.5 | 19       | 20 | 35 | 62 |

## GENERAL RECOMMENDATION


 

- Before fitting the radiator it is necessary to wash out the heating system to remove any existing mud, scale, work residues, traces of flux, oil, etc.
- When the system water pH is outside the 8,5-5,5 range and/or when the dissolved is above 0,1mg/liter, it is always needed to protect the heating system components (the radiator is one of these) with a proper chemical treatment compatible with all parts in contact with water (silicon rubber too).
- In order to fit the radiator to the wall, it is necessary to choose the proper fixings for the wall material.
- If the system water exceeds °50C, please install a warning mark near the radiator to avoid any accidental scalding.
- Clean the radiator surface only with a soft cloth to avoid scratching the finish and do not use chemical agents during cleaning operations. It is prohibited to climb on the radiator.
- Maximum working temperature °95C, maximum working pressure 4 bar.

# PIATTO INSTALLATION GUIDE



This product must be fitted only by a fully qualified installer.

| Description    | Illustration                                                                      | Qty |
|----------------|-----------------------------------------------------------------------------------|-----|
| Radiator       |  | 1   |
| Top Bracket    |  | 2   |
| Bottom Bracket |  | 2   |
| Fixing Screw   |  | 4   |
| Spacer         |  | 4   |
| Air Vent       |  | 2   |
| Vent cover     |  | 2   |

| Description                                                             | Illustration                                                                       |
|-------------------------------------------------------------------------|------------------------------------------------------------------------------------|
| Fixings choose the appropriate fixing for the wall material if required |  |
| PTFE tape                                                               |   |
| Electric drill                                                          |   |
| Masonry drill bit appropriate to the fixings                            |   |
| Adjustable spanner                                                      |   |
| Radiator valve Hex Key                                                  |   |
| Flat head and Philips head screw drivers                                |   |
| 1 Lock shield valve and 1 Gate or Thermostatic valve                    |   |
| Spirit level                                                            |   |
| Measuring tape                                                          |   |

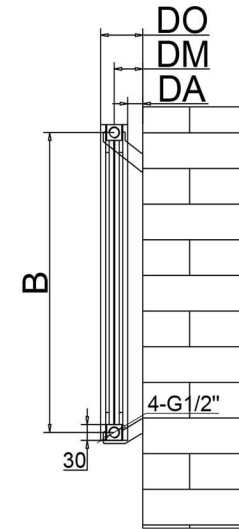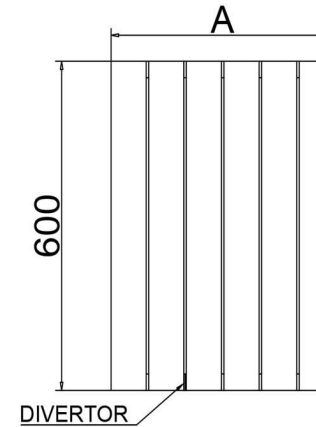

This picture represents appearance look of a radiator.

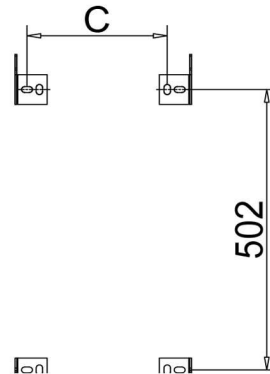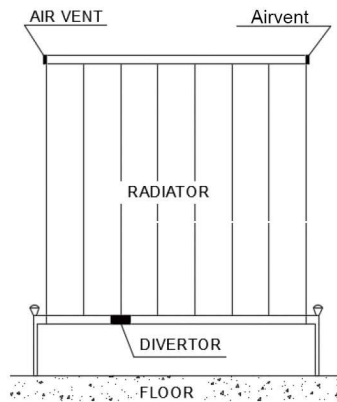

| NAMES         |     | A    | B   | C     | TUBE QTY | DA   | DM | DO   |
|---------------|-----|------|-----|-------|----------|------|----|------|
| A-PTO060044DA | 600 | 445  | 570 | 262.5 | 6        | 30.5 | 57 | 83.5 |
| A-PTO060044DW | 600 | 445  | 570 | 262.5 | 6        | 30.5 | 57 | 83.5 |
| A-PTO060059DA | 600 | 595  | 570 | 412.5 | 8        | 30.5 | 57 | 83.5 |
| A-PTO060059DW | 600 | 595  | 570 | 412.5 | 8        | 30.5 | 57 | 83.5 |
| A-PTO060082DA | 600 | 820  | 570 | 637.5 | 11       | 30.5 | 57 | 83.5 |
| A-PTO060082DW | 600 | 820  | 570 | 637.5 | 11       | 30.5 | 57 | 83.5 |
| A-PTO060104DA | 600 | 1045 | 570 | 862.5 | 14       | 30.5 | 57 | 83.5 |
| A-PTO060104DW | 600 | 1045 | 570 | 862.5 | 14       | 30.5 | 57 | 83.5 |
| A-PTO060119DA | 600 | 1195 | 570 | 862.5 | 16       | 30.5 | 57 | 83.5 |
| A-PTO060119DW | 600 | 1195 | 570 | 862.5 | 16       | 30.5 | 57 | 83.5 |
| A-PTO060142DA | 600 | 1420 | 570 | 862.5 | 19       | 30.5 | 57 | 83.5 |
| A-PTO060142DW | 600 | 1420 | 570 | 862.5 | 19       | 30.5 | 57 | 83.5 |

## GENERAL RECOMMENDATION

- Before fitting the radiator it is necessary to wash out the heating system to remove any existing mud, scale, work residues, traces of flux, oil, etc.
- When the system water pH is outside the 8,5-5,5 range and/or when the dissolved is above 0,1mg/liter, it is always needed to protect the heating system components (the radiator is one of these) with a proper chemical treatment compatible with all parts in contact with water (silicon rubber too).
- In order to fit the radiator to the wall, it is necessary to choose the proper fixings for the wall material.
- If the system water exceeds °50C, please install a warning mark near the radiator to avoid any accidental scalding.
- Clean the radiator surface only with a soft cloth to avoid scratching the finish and do not use chemical agents during cleaning operations. It is prohibited to climb on the radiator.
- Maximum working temperature °95C, maximum working pressure 4 bar.