
Radiator Name:TORNEDO

This product must be fitted only by a fully qualified installer


Description	Illustration	Qty
Radiator		1
Bracket		4
Fixing Screw		4
Spacer		4
Air Vent		1
End Plug		1

Description	Illustration
Fixings choose the appropriate fixing for the wall material if required	
PTFE tape	
Electric drill	
Masonry drill bit appropiate to the fixings	
Adjustable spanner	
Radiator valve Hex Key	
Flat head and Philips head screw drivers	
1 Lock shield valve and 1 Gate or Thermostatic valve	
Spirit level	
Measuring tape	

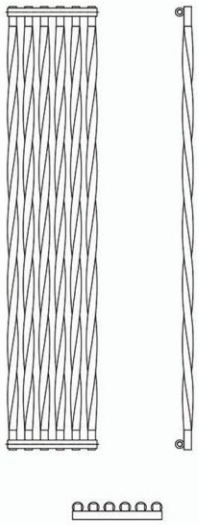


GENERAL RECOMMENDATION


Before fitting the radiator it is necessary to wash out the heating system to remove any exisiting mud, scale, work residues, iraces of flux, oil etc.... When the system water PH is outside the 5.5-8.5 range and /or when the dissolved is above 0.1mg/litre, it is always needed to protect the heating system components (the radiator is one of these) with a proper chemical treatment compatible with all parts in contact with water (Silicon rubber too). In order to fit the radiator to the wall, it is necessary to choose the proper fixings for the wall material. If the system water exceeds 50 centigrad degree, please install a warning mark near the radiator to avoid any accidental scalding. Clean the radiator surface only with a soft cloth to avoid scratching the finish and do not use chemical againts during cleaning operations. It is prohibited to climb on the radiator. Maximum working temperature: 95 centrigad degree. Maximum working pressure: 4 bar.

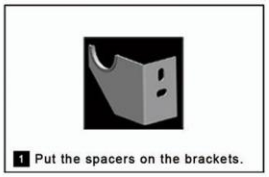


1 Put the spacers on the brackets.

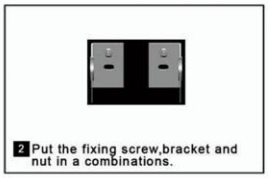

2 Put the fixing screw,bracket and nut in a combinations.

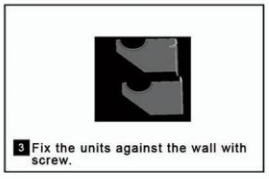


3 Fix the units against the wall with screw.

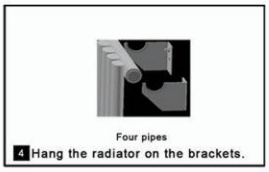


Four pipes

4 Hang the radiator on the brackets.

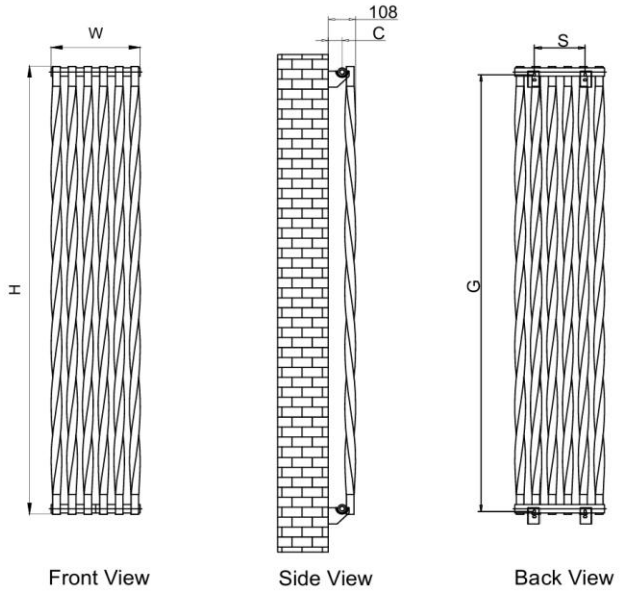

Front View Side View Back View



Top view

SUPPLTED INSTALLATION ACCESSORIES

X4 X2

X4 X1 X1

-Vertical Mounting
-Optional Ral Color Selection
-Max Operaional Pressure:6Bar
-Inlet/Outlet:½"Female Pipe Thread
-All Dimensions are in mm


Product Code	Product Name	pipe number	Height	Width	Thickness	hanger Axes Horizontal	hanger Axes vertcal	Wall to pipe center distance	Empty Weight	Water volume
		-	H	W	D	S	G	C	-	-
			mm	mm	mm	mm	mm	mm	kg	l
RND-TR6VA/VB/VW/AB	RND-TR6VA/VB/VW/AB	6	1800	352	71	198	1755	55	16.06	8.3
RND-TR7VA/VB/VW/AB	RND-TR7VA/VB/VW/AB	7	1800	414	71	260	1755	55	18.71	9.7
RND-TR8VA/VB/VW/AB	RND-TR8VA/VB/VW/AB	8	1800	476	71	322	1755	55	21.36	11.1
RND-TR9VA/VB/VW/AB	RND-TR9VA/VB/VW/AB	9	1800	538	71	384	1755	55	24.00	12.5

Radiator Name:TORNEDO

This product must be fitted only by a fully qualified installer


Description	Illustration	Qty
Radiator		1
Bracket		4
Fixing Screw		4
Spacer		4
Air Vent		1
End Plug		1


Description	Illustration
Fixings choose the appropriate fixing for the wall material if required	
PTFE tape	
Electric drill	
Masonry drill bit appropiate to the fixings	
Adjustable spanner	
Radiator valve Hex Key	
Flat head and Philips head screw drivers	
1 Lock shield valve and 1 Gate or Thermostatic valve	
Spirit level	
Measuring tape	

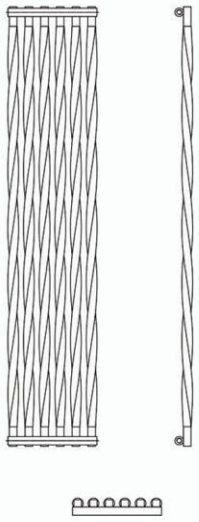


GENERAL RECOMMENDATION

Before fitting the radiator it is necessary to wash out the heating system to remove any exisiting mud, scale, work residues, iraces of flux, oil etc.... When the system water PH is outside the 5.5-8.5 range and /or when the dissolved is above 0.1mg/litre, it is always needed to protect the heating system components (the radiator is one of these) with a proper chemical treatment compatible with all parts in contact with water (Silicon rubber too). In order to fit the radiator to the wall, it is necessary to choose the proper fixings for the wall material. If the system water exceeds 50 centigrad degree, please install a warning mark near the radiator to avoid any accidental scalding. Clean the radiator surface only with a soft cloth to avoid scratching the finish and do not use chemical againts during cleaning operations. It is prohibited to climb on the radiator. Maximum working temperature: 95 centrigad degree. Maximum working pressure: 4 bar.

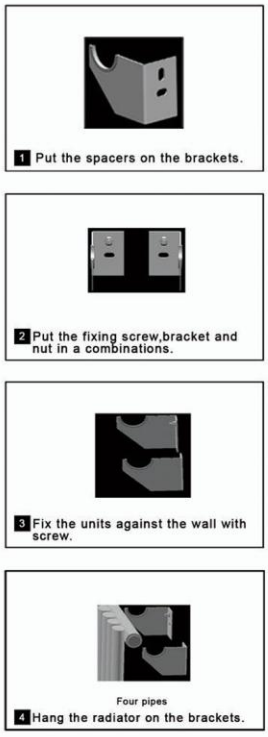

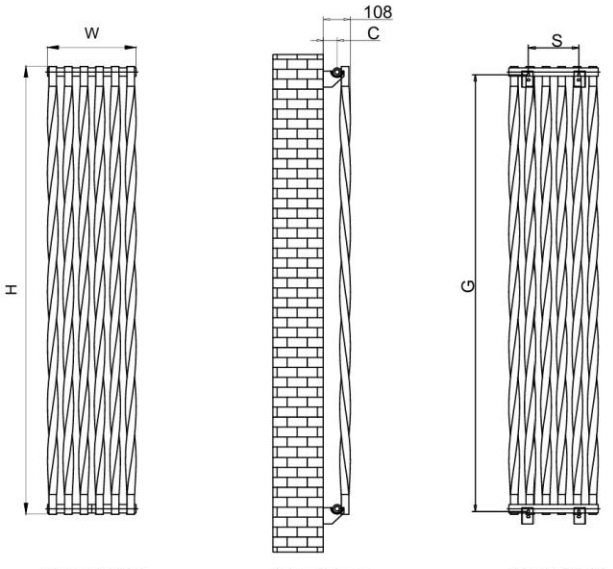


Front View Side View Back View



Top view

SUPPLTED INSTALLATION ACCESSORIES



-Vertical Mounting
-Optional Ral Color Selection
-Max Operaional Pressure:6Bar
-Inlet/Outlet½"Female Pipe Thread
-All Dimensions are in mm

Product Code	Product Name	pipe number	Height	Width	Thickness	hanger Axes Horizontal	hanger Axes vertcal	Wall to pipe center distance	Empty Weight	Water volume
		-	H	W	D	S	G	C	-	-
			mm	mm	mm	mm	mm	mm	kg	l
RND-TR6VA/VB/VW/AB	RND-TR6VA/VB/VW/AB	6	1800	352	71	198	1755	55	16.06	8.3
RND-TR7VA/VB/VW/AB	RND-TR7VA/VB/VW/AB	7	1800	414	71	260	1755	55	18.71	9.7
RND-TR8VA/VB/VW/AB	RND-TR8VA/VB/VW/AB	8	1800	476	71	322	1755	55	21.36	11.1
RND-TR9VA/VB/VW/AB	RND-TR9VA/VB/VW/AB	9	1800	538	71	384	1755	55	24.00	12.5